

## Instruction manual

## Double Insulated SAW BOSS® Circular Saw



MODEL 345

### **IMPORTANT**

To learn more about Porter-Cable  
visit our website at:

<http://www.porter-cable.com>

Please make certain that the person who is to use this equipment carefully reads and understands these instructions before starting operations.

The Model and Serial No. plate is located on the main housing of the tool. Record these numbers in the spaces below and retain for future reference.

Model No. \_\_\_\_\_

Type \_\_\_\_\_

Serial No. \_\_\_\_\_

**PORTER-CABLE**  
PROFESSIONAL POWER TOOLS



## **WARNING: SOME DUST CREATED BY POWER SANDING, SAWING, GRINDING, DRILLING, AND OTHER CONSTRUCTION ACTIVITIES**

contains chemicals known to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- lead from lead-based paints,
- crystalline silica from bricks and cement and other masonry products, and
- arsenic and chromium from chemically-treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

## **GENERAL SAFETY RULES**



### **WARNING: READ AND UNDERSTAND ALL INSTRUCTIONS.**

Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS.

### **WORK AREA**

1. **Keep your work area clean and well lit.** Cluttered benches and dark areas invite accidents.
2. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Power tools create sparks which may ignite the dust or fumes.
3. **Keep bystanders, children, and visitors away while operating a power tool.** Distractions can cause you to lose control.

### **ELECTRICAL SAFETY**

1. **Double insulated tools are equipped with a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Do not change the plug in any way.** Double Insulation ☐ eliminates the need for the three wire grounded power cord and grounded power supply system.
2. **Avoid body contact with grounded surfaces such as pipes, radiators, ranges and refrigerators.** There is an increased risk of electric shock if your body is grounded.
3. **Don't expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
4. **Do not abuse the cord. Never use the cord to carry the tools or pull the plug from an outlet. Keep cord away from heat, oil, sharp edges or moving parts. Replace damaged cords immediately.** Damaged cords increase the risk of electric shock.
5. **When operating a power tool outside, use an outdoor extension cord marked "W-A" or "W".** These cords are rated for outdoor use and reduce the risk of electric shock.

### **PERSONAL SAFETY**

1. **Stay alert, watch what you are doing, and use common sense when**

**operating a power tool. Do not use tool while tired or under the influence of drugs, alcohol, or medication.** A moment of inattention while operating power tools may result in serious personal injury.

**2. Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts.** Loose clothes, jewelry, or long hair can be caught in moving parts.

**3. Avoid accidental starting. Be sure switch is OFF before plugging in.** Carrying tools with your finger on the switch or plugging in tools that have the switch ON invites accidents.

**4. Remove adjusting keys or wrenches before turning the tool ON.** A wrench or a key that is left attached to a rotating part of the tool may result in personal injury.

**5. Do not overreach. Keep proper footing and balance at all times.** Proper footing and balance enables better control of the tool in unexpected situations.

**6. Use safety equipment. Always wear eye protection.** Dust mask, non-skid safety shoes, hard hat, or hearing protection must be used for appropriate conditions.

## **TOOLS USE AND CARE**

**1. Use clamps or other practical way to secure and support the workpiece to a stable platform.** Holding the work by hand or against your body is unstable and may lead to loss of control.

**2. Do not force tool. Use the correct tool for your application.** The correct tool will do the job better and safer at the rate for which it is designed.

**3. Do not use tool if switch does not turn it ON or OFF.** Any tool that cannot be controlled with the switch is dangerous and must be repaired.

**4. Disconnect the plug from the power source before making any adjustments, changing accessories, or storing the tool.** Such preventive safety measures reduce the risk of starting the tool accidentally.

**5. Store idle tools out of reach of children and other untrained persons.** Tools are dangerous in the hands of untrained users.

**6. Maintain tools with care. Keep cutting tools sharp and clean.** Properly maintained tools, with sharp cutting edges are less likely to bind and are easier to control.

**7. Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the tool's operation. If damaged, have the tool serviced before using.** Many accidents are caused by poorly maintained tools.

**8. Use only accessories that are recommended by the manufacturer for your model.** Accessories that may be suitable for one tool may become hazardous when used on another tool.

## **SERVICE**

**1. Tool service must be performed only by qualified repair personnel.** Service or maintenance performed by unqualified personnel could result in a risk of injury.

**2. When servicing a tool, use only identical replacement parts. Follow instructions in the Maintenance Section of this manual.** Use of unauthorized parts or failure to follow Maintenance Instructions may create a risk of electric shock or injury.

## **SPECIFIC SAFETY RULES AND SYMBOLS**

**1. DANGER! Keep hands away from cutting area and blade. Keep your second hand on auxiliary handle or motor housing.** If both hands are holding the saw, they cannot be cut by the blade.

**2. Keep your body positioned to either side of the saw blade, but not in line with the saw blade.** KICKBACK could cause the saw to jump backwards. (See “Causes and Operator Prevention of KICKBACK”).

**3. Do not reach underneath the work.** The guard cannot protect you from the blade below the work.

**4. Check lower guard for proper closing before each use. Do not operate saw if lower guard does not move freely and close instantly. Never clamp or tie the lower guard into the open position.** If saw is accidentally dropped, lower guard may be bent. Raise the lower guard with the Retracting Handle and make sure it moves freely and does not touch the blade or any other part, in all angles and depths of cut.

**5. Check the operation and condition of the lower guard spring. If the guard and the spring are not operating properly, they must be serviced before use.** Lower guard may operate sluggishly due to damaged parts, gummy deposits, or a buildup of debris.

**6. Lower guard should be retracted manually only for special cuts such as “Pocket Cuts” and “Compound Cuts.” Raise lower guard by Retracting Handle. As soon as blade enters the material, lower guard must be released.** For all other sawing, the lower guard should operate automatically.

**7. Always observe that the lower guard is covering the blade before placing saw down on bench or floor.** An unprotected, coasting blade will cause the saw to walk backwards, cutting whatever is in its path. Be aware of the time it takes for the blade to stop after switch is released.

**8. NEVER hold piece being cut in your hands or across your leg.** It is important to support the work properly to minimize body exposure, blade binding, or loss of control.

**9. Hold tool by insulated gripping surfaces when performing an operation where the cutting tools may contact hidden wiring or its own cord.** Contact with a “live” wire will make exposed metal parts of the tool “live” and shock the operator.

**10. When ripping always use a rip fence or straight edge guide.** This improves the accuracy of cut and reduces the chance for blade binding.

**11. Always use blades with correct size and shape (diamond vs. round) arbor holes.** Blades that do not match the mounting hardware of the saw will run eccentrically, causing loss of control.

**12. Never use damaged or incorrect blade washers or bolts.** The blade washers and bolt were specially designed for your saw, for optimum performance and safety of operation.


### **13. Causes and Operator Prevention of Kickback:**

Kickback is a sudden reaction to a pinched, bound, or misaligned saw blade, causing an uncontrolled saw to lift up and out of the workpiece toward the operator.

When the blade is pinched or bound tightly by the kerf closing down, the blade stalls and the motor reaction drives the unit rapidly back toward the operator.


If the blade becomes twisted or misaligned in the cut, the teeth at the back edge of the blade can dig into the top surface of the wood causing the blade to climb out of the kerf and jump back toward the operator.



 
 



Kickback is the result of tool misuse and/or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below:

- 14. Maintain a firm grip on the saw and position your body and arm in a way that allows you to resist KICKBACK forces.** KICKBACK forces can be controlled by the operator, if proper precautions are taken.
- 15. When blade is binding, or when interrupting a cut for any reason, release the trigger and hold the saw motionless in the material until the blade comes to a complete stop. Never attempt to remove the saw from the work or pull the saw backward while the blade is in motion or KICKBACK may occur.** Investigate and take corrective actions to eliminate the cause of blade binding.
- 16. When restarting a saw in the workpiece, center the saw blade in the kerf and check that teeth are not engaged into the material.** If saw blade is binding, it may walk up or KICKBACK from the workpiece as the saw is restarted.
- 17. Support large panels to minimize the risk of blade pinching and KICKBACK.** Large panels tend to sag under their own weight. Supports must be placed under the panel on both sides, near the line of cut and near the edge of the panel.
- 18. Do not use dull or damaged blade.** Unsharpened or improperly set blades produce narrow kerf causing excessive friction, blade binding, and KICKBACK.
- 19. Blade depth and bevel adjusting locking levers must be tight and secure before making cut.** If blade adjustment shifts while cutting, it will cause binding and KICKBACK.
- 20. Use extra caution when making a “Pocket Cut” into existing walls or other blind areas.** The protruding blade may cut objects that can cause KICKBACK.
- 21. Some wood contains preservatives which can be toxic.** Take extra care to prevent inhalation and skin contact when working with these materials. Request, and follow, all safety information available from your material supplier.
- 22.  WARNING: There are certain applications for which this tool was designed.** Porter-Cable strongly recommends that this tool NOT be modified and/or used for any application other than for which it was designed. If you have any questions relative to its application DO NOT use the tool until you have written Porter-Cable and we have advised you.

Technical Service Manager  
Porter-Cable Corporation  
4825 Highway 45 North  
Jackson, TN 38305

# SAVE THESE INSTRUCTIONS.

SYMBOL	DEFINITION
V	volts
A	amperes
Hz	hertz
W	watts
kW	kilowatts
μF	microfarads
l	liters
kg	kilograms
N/cm <sup>2</sup>	newtons per square centimeter
Pa	pascals
h	hours
min	minutes
s	seconds
	alternating current

3 	.....	three-phase alternating current
3N 	.....	three-phase alternating current with neutral
	.....	direct current
n <sub>0</sub>	.....	no load
	.....	alternating or direct current
	.....	Class II Construction
	.....	splash-proof construction
	.....	watertight construction
.../min	.....	revolutions or reciprocation per minute

## REPLACEMENT PARTS

When servicing use only identical replacement parts.

## MOTOR

Many Porter-Cable tools will operate on either D.C., or single phase 25 to 60 cycle A.C. current and voltage within plus or minus 5 percent of that shown on the specification plate on the tool. Several models, however, are designed for A.C. current only. Refer to the specification plate on your tool for proper voltage and current rating.

**CAUTION:** Do not operate your tool on a current on which the voltage is not within correct limits. Do not operate tools rated A.C. only on D.C. current. To do so may seriously damage the tool.

## EXTENSION CORD SELECTION

If an extension cord is used, make sure the conductor size is large enough to prevent excessive voltage drop which will cause loss of power and possible motor damage. A table of recommended extension cord sizes will be found below. This table is based on limiting line voltage drop to 5 volts (10 volts for 230 volts) at 150% of rated amperes.

If an extension cord is to be used outdoors it must be marked with the suffix W-A or W following the cord type designation. For example – SJTW-A to indicate it is acceptable for outdoor use.

RECOMMENDED EXTENSION CORD SIZES FOR USE WITH PORTABLE ELECTRIC TOOLS

		Length of Cord in Feet								
		115V	25 Ft.	50 Ft.	100 Ft.	150 Ft.	200 Ft.	250 Ft.	300 Ft.	400 Ft.
		230V	50 Ft.	100 Ft.	200 Ft.	300 Ft.	400 Ft.	500 Ft.	600 Ft.	800 Ft.
Nameplate Ampere Rating	0-2	18	18	18	16	16	14	14	12	12
	2-3	18	18	16	14	14	12	12	10	10
	3-4	18	18	16	14	12	12	10	10	8
	4-5	18	18	14	12	12	10	10	8	8
	5-6	18	16	14	12	10	10	8	8	6
	6-8	18	16	12	10	10	8	6	6	6
	8-10	18	14	12	10	8	8	6	6	4
	10-12	16	14	10	8	8	6	6	4	4
	12-14	16	12	10	8	6	6	6	4	2
	14-16	16	12	10	8	6	6	4	4	2
	16-18	14	12	8	8	6	4	4	2	2
	18-20	14	12	8	6	6	4	4	2	2

# FUNCTIONAL DESCRIPTION

## FOREWORD

Your Porter-Cable circular saw is designed for use with 150mm (6") diameter, thin-kerf blades having a 1/2" diameter mounting hole.

## SELECTING A BLADE

A combination blade is furnished with your saw and is an excellent blade for all general ripping and crosscutting operations. A fine tooth blade is recommended for cutting plywood. A diamond blade is available for dry cutting concrete, brick, stone, etc.

## REMOVING THE BLADE

1. **CAUTION:** DISCONNECT TOOL FROM POWER SOURCE.
2. Push in blade lock (A) Fig. 1 and rotate blade by hand until lock engages blade arbor.
3. While holding blade lock engaged, use wrench provided (B), Fig. 1, and loosen blade retaining bolt by rotating clockwise. **NOTE:** Blade retaining bolt has a left hand thread.
4. Remove blade retaining bolt, release blade lock and remove outer blade flange.
5. Retract telescoping guard and remove blade.

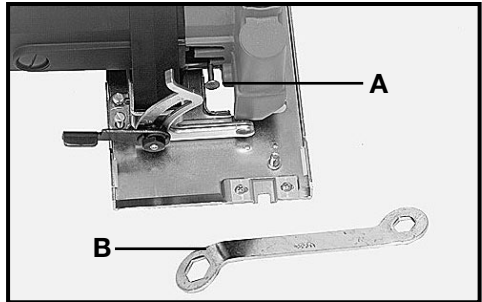


Fig. 1

## INSTALLING THE BLADE

1. **CAUTION:** DISCONNECT TOOL FROM POWER SOURCE.
2. Remove any sawdust that may have accumulated within guards, around arbor, and telescoping guard spring. Check the telescoping guard to insure it is in working order.
3. Clean inner blade flange and retract telescoping guard and place sharp blade on arbor making sure teeth point up at front of saw as shown in Fig. 2.

**CAUTION:** AVOID CONTACT WITH BLADE TEETH TO PREVENT PERSONAL INJURY.

4. Place outer blade flange on arbor with flange towards blade and flats mating with those on arbor.
5. Replace blade retaining bolt and finger tighten by turning counterclock-wise.
6. Push in blade lock and rotate blade arbor by hand until lock engages arbor. Tighten blade retaining bolt with wrench provided just enough to prevent blade slippage during normal cutting and release blade lock.

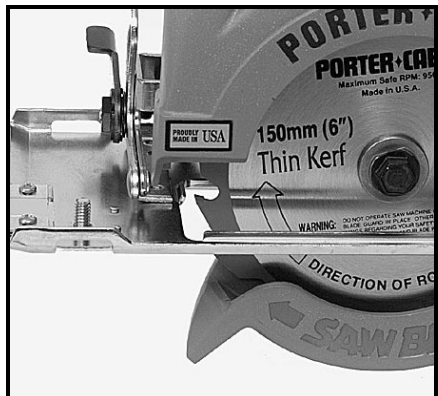


Fig. 2

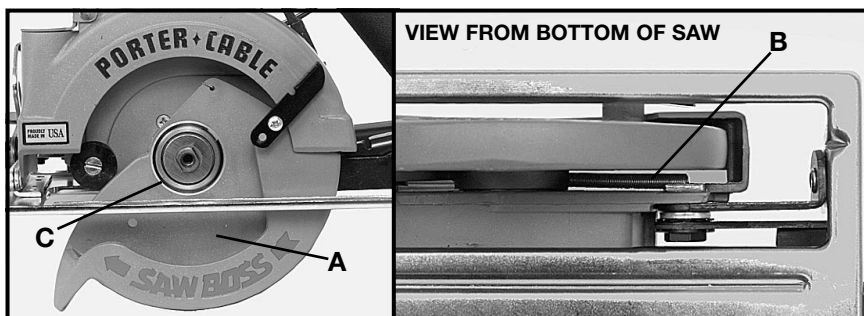


Fig. 3

## TELESCOPING GUARD

**⚠ WARNING:** The telescoping guard (A), Fig. 3, is a safety device important to your protection. Everytime you use the saw, see that the telescoping guard rotates freely and returns quickly and completely to its closed position. Frequently check the retracting spring (B), Fig. 3, to see that it is functional and free of foreign matter. At least once a month, remove any accumulated sawdust, pitch, etc. from the area around the hub (C) of the telescoping guard, and add a few drops of light machine oil at each end of the hub. NEVER block or wedge the telescoping guard in the open position.

**CAUTION:** Never use your saw if the telescoping guard is not in working order. If telescoping guard movement is sluggish or binding exists, return the saw to your nearest AUTHORIZED PORTER-CABLE SERVICE STATION or PORTER-CABLE SERVICE CENTER for repair.

## TO ADJUST DEPTH OF CUT FOR NORMAL CUTTING

It is recommended that the depth of cut be adjusted so that the saw blade just protrudes through the thickness of material being cut. Adjust depth of cut as follows:

1. **CAUTION:** DISCONNECT TOOL FROM POWER SOURCE.
2. Lift up depth adjusting locking lever (A), Fig. 4, at rear of saw.
3. Raise or lower saw housing until the blade extends the desired distance below base.

**NOTE:** The depth adjusting segment (B) Fig. 4 is marked in  $\frac{1}{8}$ " increments for convenience in setting depth of cut. Aligning required marking with lower edge of housing will produce approximate depth of cut desired.

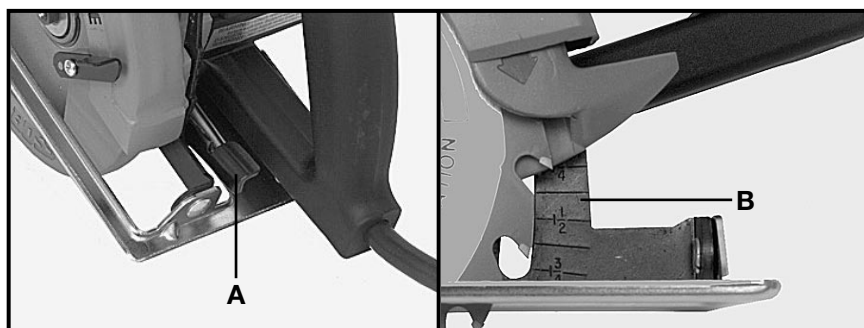


Fig. 4



4. Press depth adjusting locking lever down firmly locking saw in selected position.

## TO ADJUST FOR BEVEL CUTS

1. **CAUTION:** DISCONNECT TOOL FROM POWER SOURCE.

2. Lift up bevel adjustment locking lever (A), Fig. 5.

3. Tilt saw base until desired graduation line on the bevel segment (B), Fig. 5, lines up with indicating mark (C), Fig. 5 on bracket.

4. Return bevel adjustment locking lever to locked position and press down firmly.

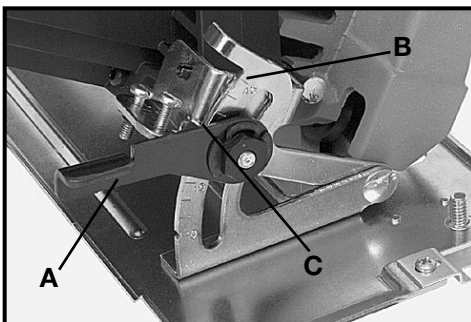


Fig. 5

## 90° and 45° BEVEL POSITIVE STOPS

This saw is equipped with adjustable positive stops for both 90° (A), Fig. 6, and 45°

bevel (B), Fig. 6, cuts. These have been set at the factory and it is recommended they be checked occasionally to assure accuracy.

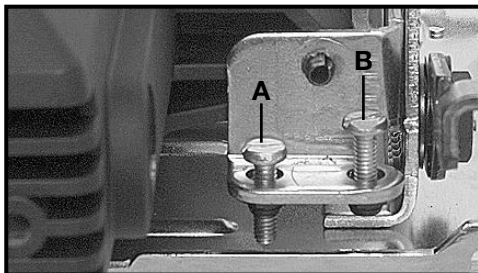


Fig. 6

## TO ADJUST 90° POSITIVE STOP

1. **CAUTION:** DISCONNECT TOOL FROM POWER SOURCE.

2. Loosen bevel adjustment locking lever (A), Fig. 5, and position base for 90° cuts being sure that the top of the base is in contact with the bottom of stop screw (A), Fig. 6, and tighten locking lever.

3. Turn saw upside down, retract telescoping guard and check squareness of blade as shown in Fig. 7.

4. If adjustment is necessary loosen bevel adjustment locking lever, keeping top of base in contact with stop screw, turn stop screw until squareness is obtained.

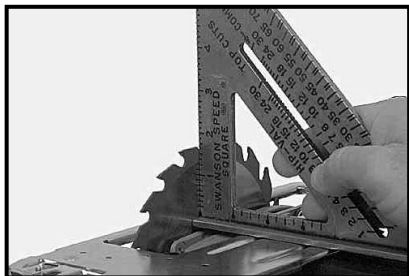


Fig. 7

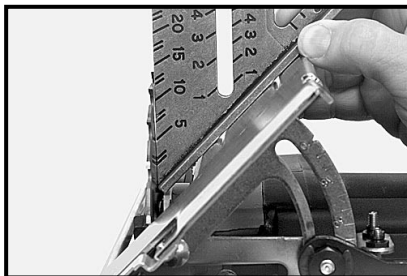


Fig. 8

## TO ADJUST 45° BEVEL POSITIVE STOP

1. **CAUTION:** DISCONNECT TOOL FROM POWER SOURCE.

2. Loosen bevel adjustment locking lever and tilt base until top of stop screw (B), Fig. 6, contacts extension on bevel segment and tighten locking lever.

3. Turn saw upside down, retract telescoping guard and check 45° angle as shown in Fig. 8.
4. If adjustment is necessary loosen bevel adjustment locking lever and turn stop screw until angle is correct.

## LINE OF CUT INDICATOR

A line of cut indicator (A), Fig. 9, is provided at the front of the base. The left edge of the notch in this indicator is used to follow a line when making 90° cuts. The right edge of the notch is used to follow a line when making 45° cuts. This indicator may be adjusted as follows:

1. **CAUTION: DISCONNECT TOOL FROM POWER SOURCE.**
2. Adjust saw for 90° cut.
3. Loosen two screws (B), Fig. 9.
4. Place a straight edge along side of blade touching set of blade teeth at both front and rear of blade as shown in Fig. 9A.

**CAUTION:** Avoid contact with blade teeth to prevent personal injury.

5. Align left edge of notch in indicator with straight edge and tighten two screws (B), Fig. 9.

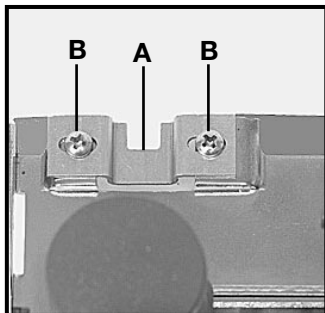


Fig. 9

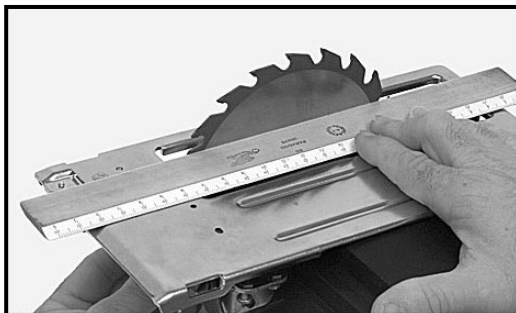


Fig. 9A

## TO ASSEMBLE THE OPTIONAL BASE INSERT

An optional base insert (A), Fig. 10, is available as an accessory and is used to reduce chipping and splintering of top fibers of plywood when used with a fine tooth blade. THIS INSERT CANNOT BE USED WHEN MAKING BEVEL CUTS. Install insert as follows:

1. **CAUTION: DISCONNECT TOOL FROM POWER SOURCE.**
2. Adjust saw for minimum depth of cut.
3. Place large slot in insert around stud and the two small slots over raised dimples on front of base as shown in Fig. 10.
4. Install washer (B), Fig. 10, and knob (C), Fig. 10, on stud but do not tighten at this time.

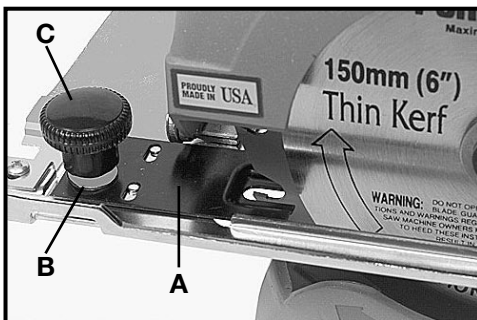


Fig. 10

5. Adjust saw for depth of cut so that slot in insert straddles saw blade at least  $\frac{1}{8}$ ".
6. Align insert so the saw blade is centered in the slot and tighten knob securely.

## INSTALLING SAWDUST EXHAUST NOZZLE

An exhaust nozzle is provided to direct sawdust away from operator and the line of cut. This nozzle can be rotated 360° and is installed as follows:

1. **CAUTION:** DISCONNECT TOOL FROM POWER SOURCE.
2. Swing open exhaust cover (A), Fig. 11, and clean out any sawdust that may have accumulated.
3. Insert nozzle in exhaust opening and push in until seated.
4. To remove, grasp nozzle where it enters exhaust opening and pull out.

**CAUTION:** Never direct sawdust toward the operator. To avoid personal injury from flying sawdust, the exhaust cover should be kept closed at all times the nozzle is not assembled. NEVER insert foreign objects into exhaust opening.

## INSTALLING AND CARE OF DUST BAG

A dust bag is available as an accessory. Install dust bag as follows:

1. **CAUTION:** DISCONNECT TOOL FROM POWER SOURCE.
2. Swing open exhaust cover (A), Fig. 12, and clean out any sawdust that may have accumulated.
3. Insert dust bag tube in exhaust opening and push in until seated.
4. To remove, grasp dust bag tube where it enters exhaust opening and pull out.
5. Unzip bag and shake out sawdust. Occasionally turn bag inside out and brush out thoroughly.

**CAUTION:** To avoid personal injury from flying sawdust, the exhaust cover should be kept closed at all times the dust bag is not assembled. NEVER insert foreign objects into exhaust opening.

## VACUUM CLEANER ADAPTER

An adapter and hose assembly is available as an accessory for connecting the exhaust opening directly to a shop type vacuum cleaner.

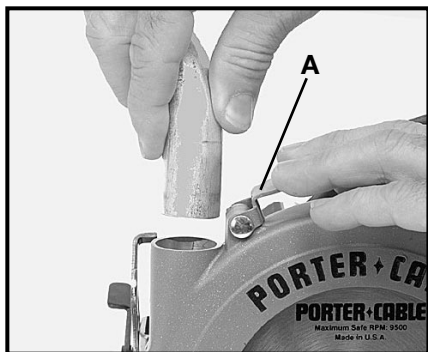


Fig. 11

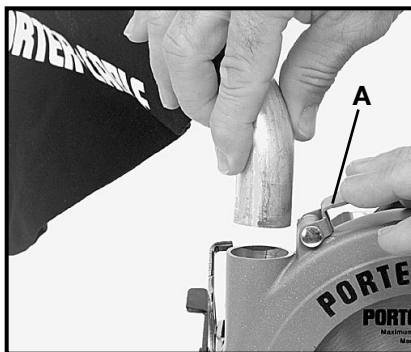


Fig. 12

## TO ASSEMBLE RIP GUIDE

A rip guide (A), Fig. 13, is available as an accessory. Install rip guide as follows:

1. **CAUTION:** DISCONNECT TOOL FROM POWER SOURCE.

2. Insert rip guide through slot in left side of base, over stud and through slot in right side of base.

3. Install knob and washer on stud and adjust rip guide for desired width of cut, taking into consideration the set of the blade teeth.

4. Tighten knob securely.

**CAUTION:** To avoid damage to workpiece and possible personal injury, the rip guide should always extend through both slots in base.

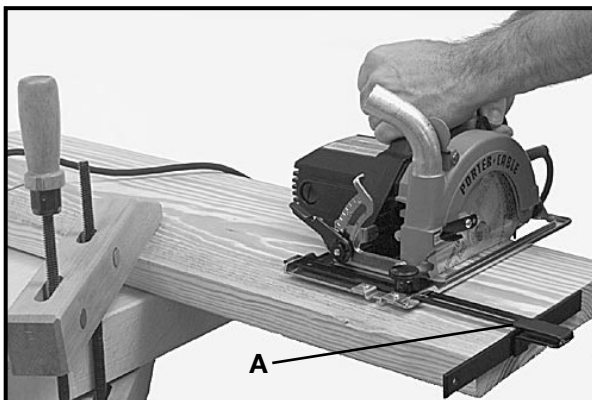


Fig. 13

## HOW TO USE THE SAW

For protection of the operator, effective control of this powerful saw requires two-handed operation. The saw may be operated either righthanded or left-handed as shown in Fig. 14.

**⚠ WARNING:** It is important to support the work properly and to hold the saw firmly to prevent loss of control which could cause personal injury. Fig. 14 illustrates proper hand support of the saw.

Clamp work on a rigid support such as a bench or saw horses. See Fig. 14. Mark the line of cut on the work. Be sure cut-off line is beyond end of support to the left only enough to allow proper operation of the telescoping guard. Place front edge of saw squarely on work before starting motor. Sight the cutting line with the line of cut indicator (A), Fig. 9. Back saw up slightly and start motor. Move saw forward keeping the edge of line indicator parallel to line of cut.

**CAUTION:** Keep the cord away from the cutting area, so it does not get hung up in the work being cut. See Fig. 14.

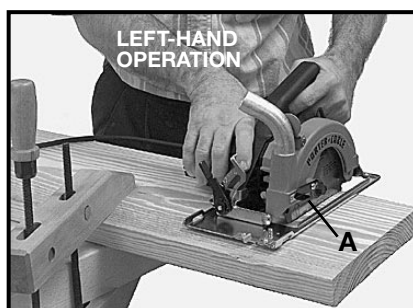
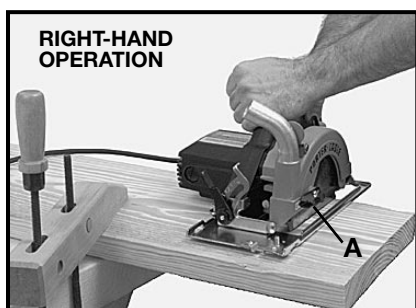


Fig. 14

Do not force the cut. Let the saw do the cutting at the rate of speed permitted by the type of cut and the material being cut. When the cut is completed, release the switch and allow the blade to stop before lifting the saw from the work. On through-cuts, be sure the lower blade guard is closed, before setting the saw down.

## CROSS-CUTTING

Cutting directly across the grain of a piece of lumber is called crosscutting. Fig. 14 illustrates a crosscut operation. Position the work so that the cut will be on the left, as shown.

## RIPPING

Cutting wood lengthwise is referred to as ripping. This operation is performed in the same manner as crosscutting with the exception of supporting the material to be cut. If material is supported on a large table, bench or floor, several pieces of scrap stock approximately one inch thick should be placed beneath the material to allow clearance for the portion of the saw blade that extends thru the material. Large sheets of paneling or thin plywood supported on saw horses should have 2 x 4's placed lengthwise between the horses and the material, to prevent it from sagging in the center.

For narrow rip cuts, the rip guide, available as an accessory can be used. The saw is guided by keeping the inner face of the rip guide Fig. 13 tight against the edge of the board.

For making wider cuts, such as might be made in plywood and wide sheets, a wooden guide strip, against which the right edge of the saw base can be guided, can be tacked or clamped to the work, as shown in Fig. 15. **NOTE:** The depth of cut must be adjusted to allow for the thickness of the wooden guide strip.

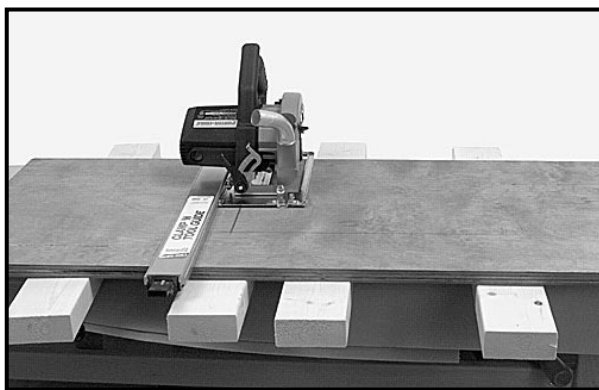


Fig. 15

## BEVEL CUTTING

Bevel cuts are made in the same manner as crosscuts and rip cuts. The only difference is that the blade is set at an angle between 0° and 45°, as shown in Fig. 16.

The bevel cut made at an angle to the edge of a board is called a compound cut. There are certain compound cuts, on which it may be necessary to manually retract the telescoping guard to allow the blade to enter into and/or through the cut.

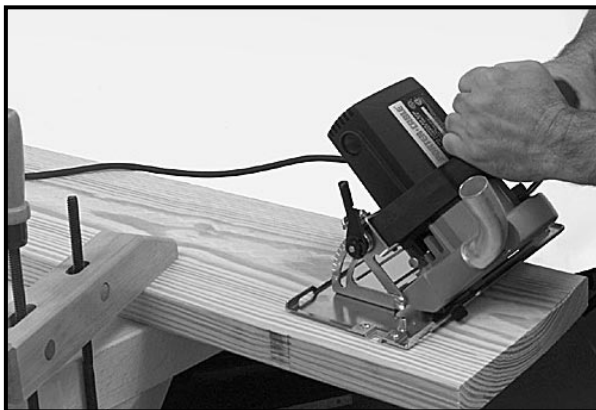


Fig. 16

**CAUTION:** Use the lever (A), Fig. 14, provided on the telescoping guard when you have to retract the telescoping guard manually.

## POCKET CUTS (PLUNGE CUTTING)

A pocket cut is one which must be made inside the area of the material and not starting from the edge. Mark the area clearly with lines on all sides. Start near the corner of one side and place front edge of saw base firmly on the work. Hold saw up so blade clears the material. Be sure you have adjusted the blade properly for depth of cut. Push the telescoping guard lever all the way back so the blade is exposed as shown in Fig. 17. Start the motor and lower the blade into the work. After the blade has cut through, and the base rests flat on the work, follow the line right up to the corner. Use a keyhole or bayonet saw to cut the corners out clean.

**CAUTION:** When making pocket cuts in stone, tile, etc., using the dry diamond blade, exercise extreme care to prevent twisting to reduce the possibility of blade damage.



Fig. 17

# MAINTENANCE

## KEEP TOOL CLEAN

Periodically blow out all air passages with dry compressed air. All plastic parts should be cleaned with a soft damp cloth. NEVER use solvents to clean plastic parts. They could possibly dissolve or otherwise damage the material.

**CAUTION:** Wear safety glasses while using compressed air.

## FAILURE TO START

Should your tool fail to start, check to make sure the prongs on the cord plug are making good contact in the outlet. Also, check for blown fuses or open circuit breakers in the line.

## LUBRICATION

This tool has been lubricated with a sufficient amount of high grade lubricant for the life of the unit under normal operating conditions. No further lubrication is necessary.

## BRUSH INSPECTION AND LUBRICATION

For your continued safety and electrical protection, brush inspection and replacement on this tool should ONLY be performed by an AUTHORIZED PORTER-CABLE SERVICE STATION or a PORTER-CABLE • DELTA FACTORY SERVICE CENTER.

At approximately 100 hours of use, take or send your tool to your nearest authorized Porter-Cable Service Station to be thoroughly cleaned and inspected. Have worn parts replaced and lubricate with fresh lubricant. Have new brushes installed, and test the tool for performance.

Any loss of power before the above maintenance check may indicate the need for immediate servicing of your tool. DO NOT CONTINUE TO OPERATE TOOL UNDER THIS CONDITION. If proper operating voltage is present, return your tool to the service station for immediate service.

## SERVICE AND REPAIRS

All quality tools will eventually require servicing or replacement of parts due to wear from normal use. These operations, including brush inspection and replacement, should ONLY be performed by either an AUTHORIZED PORTER-CABLE SERVICE STATION or a PORTER-CABLE • DELTA FACTORY SERVICE CENTER. All repairs made by these agencies are fully guaranteed against defective material and workmanship. We cannot guarantee repairs made or attempted by anyone other than these agencies.

Should you have any questions about your tool, feel free to write us at any time. In any communications, please give all information shown on the nameplate of your tool (model number, type, serial number, etc.).

# ACCESSORIES

A complete line of accessories is available from your Porter-Cable • Delta Supplier, Porter-Cable • Delta Factory Service Centers, and Porter-Cable Authorized Service Stations. Please visit our Web Site [www.porter-cable.com](http://www.porter-cable.com) for a catalog or for the name of your nearest supplier.



**WARNING:** Since accessories other than those offered by Porter-Cable • Delta have not been tested with this product, use of such accessories could be hazardous. For safest operation, only Porter-Cable • Delta recommended accessories should be used with this product.

## PORTER-CABLE LIMITED ONE YEAR WARRANTY

Porter-Cable warrants its Professional Power Tools for a period of one year from the date of original purchase. We will repair or replace at our option, any part or parts of the product and accessories covered under this warranty which, after examination, proves to be defective in workmanship or material during the warranty period. For repair or replacement return the complete tool or accessory, transportation prepaid, to your nearest Porter-Cable Service Center or Authorized Service Station. Proof of purchase may be required. This warranty does not apply to repair or replacement required due to misuse, abuse, normal wear and tear or repairs attempted or made by other than our Service Centers or Authorized Service Stations.

ANY IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WILL LAST ONLY FOR ONE (1) YEAR FROM THE DATE OF PURCHASE.

To obtain information on warranty performance please write to: PORTER-CABLE CORPORATION, 4825 Highway 45 North, Jackson, Tennessee 38305; Attention: Product Service. THE FOREGOING OBLIGATION IS PORTER-CABLE'S SOLE LIABILITY UNDER THIS OR ANY IMPLIED WARRANTY AND UNDER NO CIRCUMSTANCES SHALL PORTER-CABLE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.



# PORTER-CABLE • DELTA SERVICE CENTERS (CENTROS DE SERVICIO DE PORTER-CABLE • DELTA) (CENTRE DE SERVICE PORTER-CABLE • DELTA)

**Parts and Repair Service for Porter-Cable • Delta Power Tools are Available at These Locations**  
(Obtenga Refacción de Partes o Servicio para su Herramienta en los Sigüientes Centros de Porter-Cable • Delta)  
(Locations où vous trouverez les pièces de rechange nécessaires ainsi qu'un service d'entretien)

## ARIZONA

Tempe 85282 (Phoenix)  
2400 West Southern Avenue  
Suite 105  
Phone: (602) 437-1200  
Fax: (602) 437-2200

## CALIFORNIA

Ontario 91761 (Los Angeles)  
3949A East Guasti Road  
Phone: (909) 390-5555  
Fax: (909) 390-5554  
San Leandro 94577 (Oakland)  
3039 Teagarden Street  
Phone: (510) 357-9762  
Fax: (510) 357-7939

## COLORADO

Arvada 80003 (Denver)  
8175 Sheridan Boulevard, Unit S  
Phone: (303) 487-1809  
Fax: (303) 487-1868

## FLORIDA

Davie 33314 (Miami)  
4343 South State Rd. 7 (441)  
Unit #107  
Phone: (954) 321-6635  
Fax: (954) 321-6638  
Tampa 33609  
4538 W. Kennedy Boulevard  
Phone: (813) 877-9585  
Fax: (813) 289-7948

## GEORGIA

Forest Park 30297 (Atlanta)  
5442 Frontage Road, Suite 112  
Phone: (404) 608-0006  
Fax: (404) 608-1123

## ILLINOIS

Addison 60101 (Chicago)  
400 South Rohlfing Road  
Phone: (630) 424-8805  
Fax: (630) 424-8895  
Woodridge 60517 (Chicago)  
2033 West 75th Street  
Phone: (630) 910-9200  
Fax: (630) 910-0360

## MARYLAND

Elkridge 21075 (Baltimore)  
7397-102 Washington Blvd.  
Phone: (410) 799-9394  
Fax: (410) 799-9398

## MASSACHUSETTS

Braintree 02185 (Boston)  
719 Granite Street  
Phone: (781) 848-9810  
Fax: (781) 848-6759  
Franklin 02038 (Boston)  
Franklin Industrial Park  
101E Constitution Blvd.  
Phone: (508) 520-8802  
Fax: (508) 528-8089

## MICHIGAN

Madison Heights 48071 (Detroit)  
30475 Stephenson Highway  
Phone: (248) 597-5000  
Fax: (248) 597-5004

## MINNESOTA

Minneapolis 55429  
5522 Lakeland Avenue North  
Phone: (763) 561-9080  
Fax: (763) 561-0653

## MISSOURI

North Kansas City 64116  
1141 Swift Avenue  
P.O. Box 12393  
Phone: (816) 221-2070  
Fax: (816) 221-2897  
St. Louis 63119  
7574 Watson Road  
Phone: (314) 968-8950  
Fax: (314) 968-2790

## NEW YORK

Flushing 11365-1595 (N.Y.C.)  
175-25 Horace Harding Expwy.  
Phone: (718) 225-2040  
Fax: (718) 423-9619

## NORTH CAROLINA

Charlotte 28270  
9129 Monroe Road, Suite 115  
Phone: (704) 841-1176  
Fax: (704) 708-4625

## OHIO

Columbus 43214  
4560 Indianapolis Avenue  
Phone: (614) 263-0929  
Fax: (614) 263-1238  
Cleveland 44125  
8001 Sweet Valley Drive Unit #19  
Phone: (216) 447-9030  
Fax: (216) 447-3097

## OREGON

Portland 97230  
4916 NE 122nd Ave.  
Phone: (503) 252-0107  
Fax: (503) 252-2123

## PENNSYLVANIA

Willow Grove 19090  
520 North York Road  
Phone: (215) 658-1430  
Fax: (215) 658-1433

## TEXAS

Carrollton 75006 (Dallas)  
1300 Interstate 35 N, Suite 112  
Phone: (972) 446-2996  
Fax: (972) 446-8157  
Houston 77055  
West 10 Business Center  
1008 Wirt Road, Suite 120  
Phone: (713) 682-0334  
Fax: (713) 682-4867

## WASHINGTON

Auburn 98001 (Seattle)  
3320 West Valley Hwy, North  
Building D, Suite 111  
Phone: (253) 333-8353  
Fax: (253) 333-9613

Authorized Service Stations are located in many large cities. Telephone **800-487-8665** or **731-541-6042** for assistance locating one. Parts and accessories for Porter-Cable • Delta products should be obtained by contacting any Porter-Cable • Delta Distributor, Authorized Service Center, or Porter-Cable • Delta Factory Service Center. If you do not have access to any of these, call **888-848-5175** and you will be directed to the nearest Porter-Cable • Delta Factory Service Center. Las Estaciones de Servicio Autorizadas están ubicadas en muchas grandes ciudades. Llame al **800-487-8665** ó al **731-541-6042** para obtener asistencia a fin de localizar una. Las piezas y los accesorios para los productos Porter-Cable • Delta deben obtenerse poniéndose en contacto con cualquier distribuidor Porter-Cable • Delta, Centro de Servicio Autorizado o Centro de Servicio de Fábrica Porter-Cable • Delta. Si no tiene acceso a ninguna de estas opciones, llame al **888-848-5175** y le dirigirán al Centro de Servicio de Fábrica Porter-Cable • Delta más cercano. Des centres de service agréés sont situés dans beaucoup de grandes villes. Appelez au **800-487-8665** ou au **731-541-6042** pour obtenir de l'aide pour en repérer un. Pour obtenir des pièces et accessoires pour les produits Porter-Cable • Delta, s'adresser à tout distributeur Porter-Cable • Delta, Centre de service agréé ou centre de service d'usine Porter-Cable • Delta. Si vous n'avez accès à aucun de ces centres, appelez le **888-848-5175** et on vous dirigera vers le centre de service d'usine Porter-Cable • Delta le plus proche.

## CANADIAN PORTER-CABLE • DELTA SERVICE CENTERS

### ALBERTA

Bay 6, 2520-23rd St. N.E.  
Calgary, Alberta  
T2E 8L2  
Phone: (403) 735-6166  
Fax: (403) 735-6144

### BRITISH COLUMBIA

8520 Baxter Place  
Burnaby, B.C.  
V5A 4T8  
Phone: (604) 420-0102  
Fax: (604) 420-3522

### MANITOBA

1699 Dublin Avenue  
Winnipeg, Manitoba  
R3H 0H2  
Phone: (204) 633-9259  
Fax: (204) 632-1976

### ONTARIO

505 Southgate Drive  
Guelph, Ontario  
N1H 6M7  
Phone: (519) 836-2840  
Fax: (519) 767-4131

### QUÉBEC

1515 Ave.  
St-Jean Baptiste,  
Québec, Québec  
G2E 5E2  
Phone: (418) 877-7112  
Fax: (418) 877-7123  
1447, Bégoin  
St-Laurent, (Montréal), Québec  
H4R 1V8  
Phone: (514) 336-8772  
Fax: (514) 336-3505

The following are trademarks of PORTER-CABLE • DELTA (Las siguientes son marcas registradas de PORTER-CABLE • DELTA S.A.) (Les marques suivantes sont des marques de fabricant de la PORTER-CABLE • DELTA): BAMMER®, LASERLOC®, OMNIJIG®, POCKET CUTTER®, PORTA-BAND®, PORTA-PLANE®, PORTER-CABLE®, QUICKSAND®, SANDTRAP®, SAW BOSS®, SPEED-BLOC®, SPEEDMATIC®, SPEEDTRONIC®, STAIR-EASE®, THE PROFESSIONAL EDGE®, THE PROFESSIONAL SELECT®, TIGER CUB®, TIGER SAW®, TORQ-BUSTER®, VERSA-PLANE®, WHISPER SERIES®, DURATRAC™, FRAME SAW™, INNOVATION THAT WORKS™, JETSTREAM™, MICRO-SET™, MORTEN™, NETWORK™, RIPTIDE™, TRU-MATCH™, WOODWORKER'S CHOICE™, THE AMERICAN WOOD SHOP™ (design) , AUTO-SET™, B.O.S.S.™, BUILDER'S SAW™, CONTRACTOR'S SAW™, DELTA™, DELTACRAFT™, HOMECRAFT™, JET-LOCK™, KICKSTAND™, THE LUMBER COMPANY™ (design), MICRO-SET™, Q3™, QUICKSET II™, QUICKSET PLUS™, SAFEGUARD II™, SANDING CENTER™, SIDEKICK™, UNIFENCE™, UNIGUARD™, UNIRIP™, UNISAW™, VERSA-FEEDER™, THIN-LINE™, TPS™, Emc²™.

Trademarks noted with ™ and ® are registered in the United States Patent and Trademark Office and may also be registered in other countries. Las Marcas Registradas con el signo de ™ y ® son registradas por la Oficina de Registros y Patentes de los Estados Unidos y también pueden estar registradas en otros países. Marques déposées, indiquées par la lettre ™ et ®, sont déposées au Bureau des brevets d'invention et marques déposées aux Etats-Unis et pourraient être déposées aux autres pays.